


F M L

- Manuel d'installation de l'Embase FML
- FML Base - Installationsanleitung
- Installationsanvisning FML
- Manual de instalación de la Base del FML
- Manual de Instalação da Base do FML
- Manuale d'installazione per la base FML
- FML Base Telepítési útmutató
- Baza FML - instrucțiuni de instalare
- FML Základní návod k obsluze
- Installasjonsanvisning FML
- FML Osnovna Navodila za montažo
- Installatie instructie voor FML basis


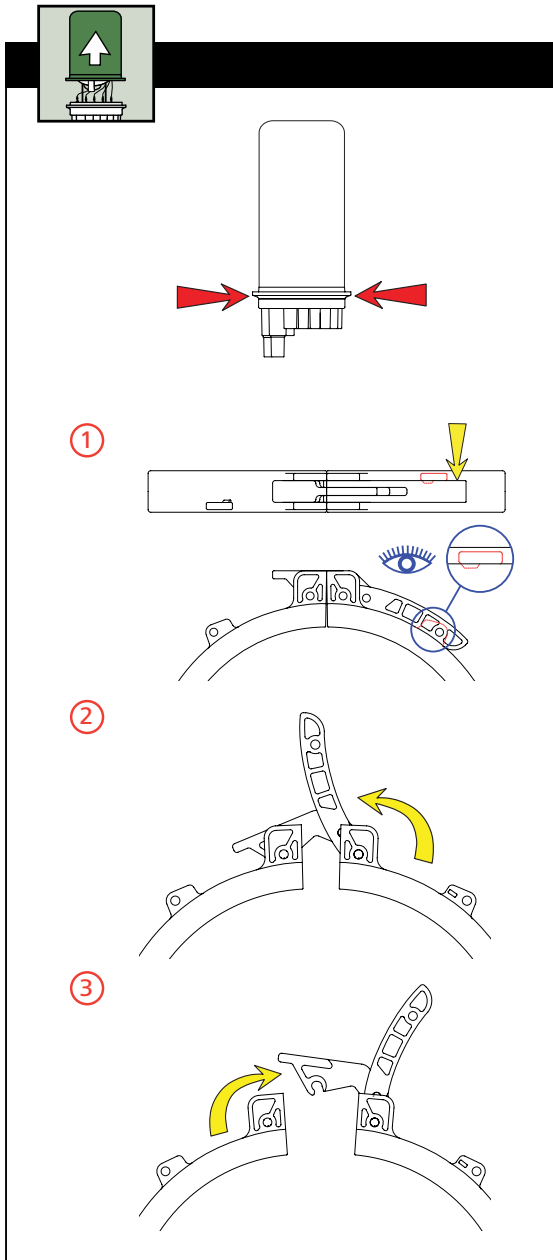


Port	Number of Ports	Cablelok™		Heatshrink	
		≥ Ø (mm)	≤ Ø (mm)	≥ Ø (mm)	≤ Ø (mm)
L	1	2 x 5.5	20.0	2 x 10.0	24.0
T	2	15.5	29.0	8.0	35.0
S	6	5.0	20.0	12.0	26.0
B	4	4.8	16.5	6.0	19.0

Port - port - Anschluß - Port - puerto - porto - porta - Port - Port - Port - Record - port - poort


Number of Ports - Nombre de ports - Anzahl der Anschlüsse - Antal portar - Número de puertos - Número de portos - Numero di porte - Portok száma - Numar racorduri - Počet portů - Antall porter - Število portov - Aantal poorten

Heatshrink - Thermo rétractable - Wärmeschrumpfschlauch - Krymslang - Termoretráctil - Termorretráteis - Termorestringente - Zsugorcső - Termocontractibil - Teplem smršťitelné hadice - krympestrømpe - toploskrčna cev - Krimpkou

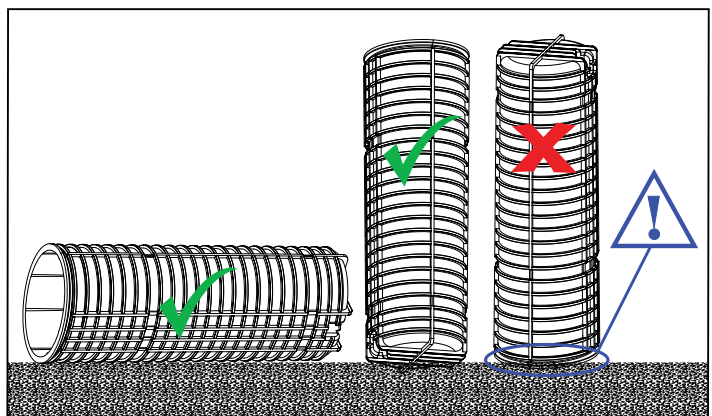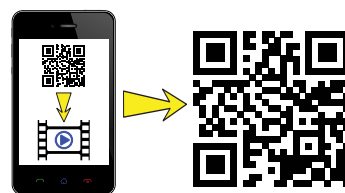





1 Cablelok Loop

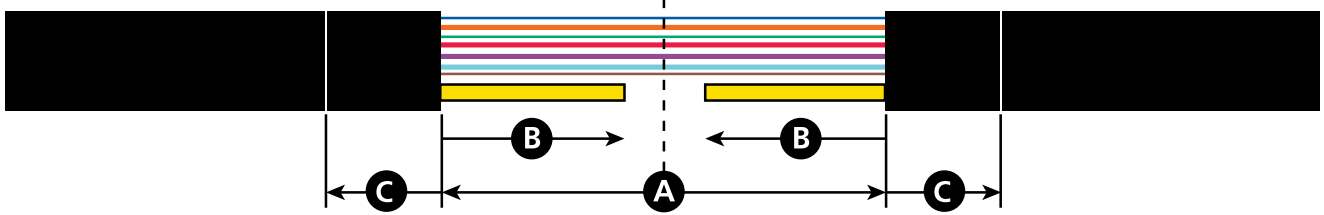


2 Cablelok

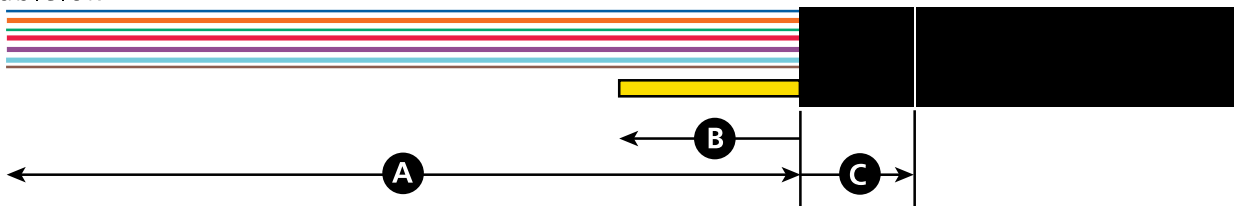

3 Heatshrink Loop



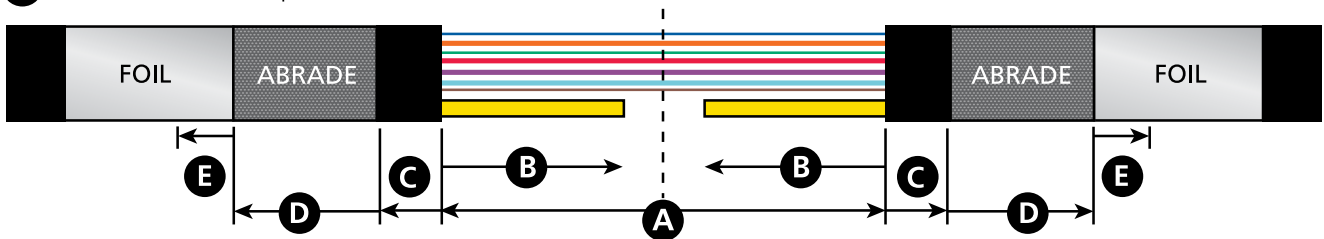


4 Heatshrink

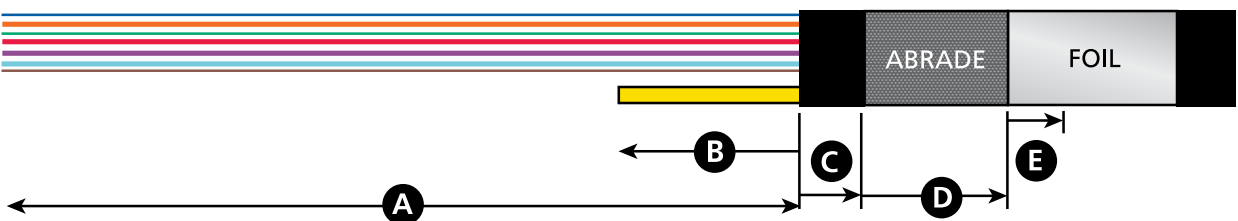

	A	B	C	D	E
1	4000mm	150mm	50mm	-	-
2	2500mm	150mm	50mm	-	-
3	4000mm	150mm	20mm	130mm	20mm
4	2500mm	150mm	20mm	130mm	20mm

Abrade - Afschuren - Slipa - Abradar - Desgastar - Abradere - Poncer - Pobrusite - Obrusit - Ledörzsöl - Şlefui - Obrúsit' - Abschürfen - Slipes - Hiertää - Slib
Foil - Foelie - Folie - FLorete - Papel De Aluminio - Foil - Foil - Folije - Fólie - Ellentét - Folie - Fólie - Foil - Folie - Folio - Folie

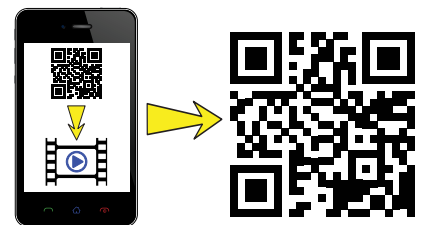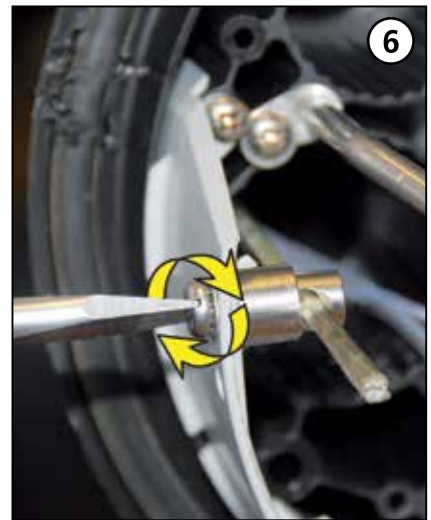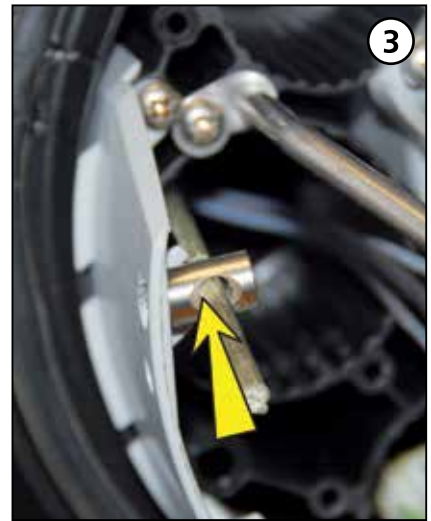

HellermannTyton

Tel: +44 (0) 1604 706633
www.htdata.co.uk

Stay in touch with us!

